

Table of Frenchwood® Patio Door Transom, Sidelight Transom and Sidelight Sizes

Scale 1/8" (3) = 1'-0" (305) – 1:96

Transom/Sidelight Dimension	1'-2 13/16" (376)	1'-6 13/16" (478)	2'-0 1/2" (622)	2'-6 1/8" (765)	2'-8 1/8" (816)	3'-0 1/8" (918)	4'-0" (1219)	4'-11 1/4" (1505)	5'-3 1/4" (1607)	5'-11 1/4" (1810)
Minimum Rough Opening	1'-3 1/2" (394)	1'-7 1/2" (495)	2'-1" (635)	2'-7" (787)	2'-9" (838)	3'-1" (940)	4'-1" (1245)	5'-0" (1524)	5'-4" (1626)	6'-0" (1829)
Unobstructed Glass (single sash only)	6 3/8" (162)	10 3/8" (264)	13 5/16" (338)	18 15/16" (481)	20 15/16" (532)	24 15/16" (633)	36 13/16" (935) 13 5/16" (338)	48 1/16" (1221) 18 15/16" (481)	52 1/16" (1322) 20 15/16" (532)	60 1/16" (1526) 24 15/16" (633)

1'-0 13/16" (325)	1'-1 1/2" (343)	4 3/8" (111)										
1'-0 13/16" (325)	1'-1 1/2" (343)	4 3/8" (111)	FWSLT1311	FWSLT1711	FWT2111	FWT2711	FWT2911	FWT3111	FWT4111	FWT5011	FWT5411	FWT6011
1'-5 13/16" (452)	1'-6 1/2" (470)	9 3/8" (238)										
1'-5 13/16" (452)	1'-6 1/2" (470)	9 3/8" (238)	FWSLT1316	FWSLT1716	FWT2116	FWT2716	FWT2916	FWT3116	FWT4116	FWT5016	FWT5416	FWT6016
1'-9 13/16" (554)	1'-10 1/2" (572)	13 3/8" (340)										
1'-9 13/16" (554)	1'-10 1/2" (572)	13 3/8" (340)	FWSLT13110	FWSLT17110	FWT21110	FWT27110	FWT29110	FWT31110	FWT41110	FWT50110	FWT54110	FWT60110
6'-7 1/2" (2019)	6'-8" (2032)	63 7/16" (1611)										
			FWSL1368	FWSL1768								
6'-10 3/8" (2092)	6'-11" (2108)	66 5/16" (1684)										
			FWSL13611	FWSL17611								
7'-11 1/2" (2426)	8'-0" (2438)	79 7/16" (2018)										
			FWSL1380	FWSL1780								




Custom-size doors are available in 1/8" (3) increments.

- "Transom/Sidelight Dimension" always refers to outside frame-to-frame dimension.
- "Minimum Rough Opening" dimensions may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.
- Dimensions in parentheses are in millimeters.

Custom Sizes and Specification Formulas



Available in 1/8" (3) increments between minimum and maximum widths and heights. Some restrictions apply. Measurement guide can be found at andersenwindows.com/measure.

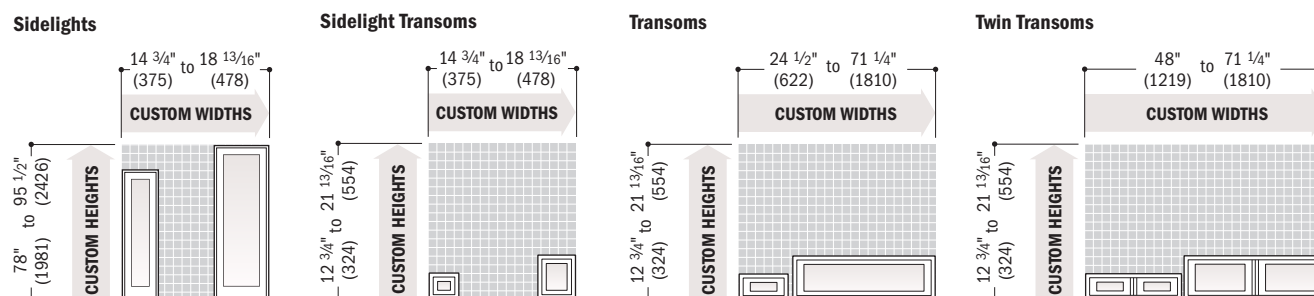

Minimum R.O. 	Transoms, Twin Transoms and Sidelight Transoms Width = width + 3/4" (19) Height = height + 3/4" (19) Sidelights Width = width + 3/4" (19) Height = height + 1/2" (13)
Unobst. Glass 	Transoms Width = window width - 11.15" (283) Height = window height - 8.4" (213) Twin Transoms Width = window width - 21.30" (541) Height = window height - 8.4" (213) Sidelight Transoms Width = window width - 8.4" (213) Height = window height - 8.4" (213) Sidelights Width = window width - 8.4" (213) Height = window height - 16.06" (408)

• **Minimum R.O.** (minimum rough opening) formulas provide minimum rough opening width and height dimensions. **Unobst. Glass** (unobstructed glass) formulas provide dimensions for determining area available for passage of light.